



GRINDERSTATION™

Glass Grinder and SwapTop™ Backsplash User Instructions

Instructions

1. Unfold your GrinderStation™ and position the center fold right behind your grinder or saw. Pass the power cord through the cutout found at the bottom of the center hinge.
2. Bend the panels at the hinges so that they come across the back of the machine and then wrap around the sides.
3. Adjust their position so that they are able to block any overspray your machine may produce.

Safety

- It is extremely important to wear proper eye protection when using any glass grinder. We highly recommend that you wear safety goggles rather than safety glasses. The GrinderStation™ is not designed to provide eye protection. You can also add the Inland [FaceShield™](#) or [MagnaShield™](#) in conjunction with proper eye wear for added protection: A shield alone is not adequate eye protection.
- DO NOT wear loose clothing or any accessories (long necklaces, bracelets, shirts with long fringes, and similar) that might get caught by the grinder head while using any Inland grinder.
- Use your machine only in a properly grounded and tested outlet. Under NO circumstances should you override the grounding system or modify the plug.
- Set up your machine on a sturdy, level work surface that is water tolerant and a comfortable height to work on
- Do not sit your grinder in a pan, on a towel or carpeting.

Maintenance

When your GrinderStation becomes dirty simply rinse with water or wipe down with a wet cloth and then dry.

Service

If you have any questions or comments regarding the use of this or any Inland product please call Inland Customer Service at 1-800-521-8428 9 AM to 5 PM EST, email us at helpdesk@inlandcraft.com, or write us at:

Inland Craft Products, Co.
32052 Edward Dr.
Madison Heights, MI 48071
www.inlandcraft.com