

inland

FACE SHIELD™

User Instructions

The FaceShield™ is an acrylic shield that provides added protection against grinder, shaper, and certain saw debris.

Please note that a FaceShield™ is **not** intended to protect your eyes. Always wear complete eye protection whenever working with tools.

Mounting Using the Wire Frame

The FaceShield™ comes with a wire mounting bracket for use these current Inland machines:



no. 10030	Wizard IV Grinder	no. 10650	SwapTop Grinder
no. 20050	Impulse™	no. 10640	SwapTop Hobby Shaper
no. 20030	Wiz CG	no. 10630	SwapTop Saw Wood Blade
no. 2003_	Contour GT	no. 10660	SwapTop Saw Metal Blade
no. 30050	Aero™		
no. 30030	Wizling CG		
no. 3003_	Contour		

To mount your FaceShield™ place the ends of the wire mounting bracket into the two locator holes found on the rear of your machine. Set the plastic lens into position on the small wire loop on top. You can adjust the position slightly by bending the wire bracket to best suit your needs.

Mounting Using the Post

You will need a plastic mounting post that fits into the grid surface if you plan to use this product on any of [Inland's older model machines](#) (pre-1991), including:



Wizard
Wizard Plus

Wiz
Wizling

PopTop Wiz
PopTop Wizling

To receive a free plastic mounting post, call Inland Customer Service at 1-800-521-8428 or e-mail us at helpdesk@inlandcraft.com. To temporarily support your FaceShield™ in one of these older style machines, you can insert the legs of the wire bracket into the far back corners of your open grid work surface.

Once you have the plastic mounting post, place the slotted end under running cold water for about 30 seconds. This will temporarily shrink the plastic and allow for easier insertion. Center the post directly behind the bit opening in the grid surface with the slotted opening lengthwise. Gently rock the mounting post while applying downward pressure until it is fully inserted into the holes in the grid surface. Set the plastic lens onto the peg end of the post.

Maintenance

Clean your FaceShield™ by removing it and rinse off under cool running water after every use. In order to prevent scratching, avoid rubbing or wiping the surface.

Service

If you have any questions or comments regarding the use of this or any Inland product please call Inland Customer Service at 1-800-521-8428 9 AM to 5 PM EST, email us at helpdesk@inlandcraft.com, or write us at:

Inland Craft Products, Co.
32052 Edward Dr.
Madison Heights, MI 48071
www.inlandcraft.com