




SwapTop™ Table Saw Rip Fence Accessory

Use the fence as a guide to make repeat cuts or ensure an accurate straight cut with all materials, wet or dry.



1. **IMPORTANT:** Turn off the saw when you are setting up a cut or adjusting a cut with the fence!
2. The Rip Fence consists of two pieces: The rip fence (A) and the pressure plate (B). The lower groove of the rip fence (C) hooks onto the rear of the work surface. The rip fence is tightened in place by turning the pressure knob (D) which forces the pressure plate face (E) against the front of the work surface.
3. You can use the rip fence on either side of the blade.
4. Use a ruler to measure from the edge of the blade to the edge of the rip fence closest to the saw blade. To ensure accuracy measure from both the front and back of the blade to the rip fence.
5. Turn the pressure knob to tighten the fence in place. Make a test cut by placing material to be cut against the fence and as you feed the material into the blade, check the width. If it is not the correct width, adjust the fence as necessary.

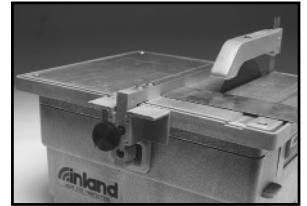

Service

For questions or comments regarding the use of this or any Inland product, visit our website at www.inlandcraft.com; email us at helpdesk@inlandcraft.com; call Inland Customer Service at 1-800-521-8428 from 9 AM to 5 PM EST or write:

Inland Craft Products, Co. • 32052 Edward Drive • Madison Heights, MI 48071

Rev No. 1

Stock No. 69861661




SwapTop™ Table Saw Rip Fence Accessory

Use the fence as a guide to make repeat cuts or ensure an accurate straight cut with all materials, wet or dry.



1. **IMPORTANT:** Turn off the saw when you are setting up a cut or adjusting a cut with the fence!
2. The Rip Fence consists of two pieces: The rip fence (A) and the pressure plate (B). The lower groove of the rip fence (C) hooks onto the rear of the work surface. The rip fence is tightened in place by turning the pressure knob (D) which forces the pressure plate face (E) against the front of the work surface.
3. You can use the rip fence on either side of the blade.
4. Use a ruler to measure from the edge of the blade to the edge of the rip fence closest to the saw blade. To ensure accuracy measure from both the front and back of the blade to the rip fence.
5. Turn the pressure knob to tighten the fence in place. Make a test cut by placing material to be cut against the fence and as you feed the material into the blade, check the width. If it is not the correct width, adjust the fence as necessary.

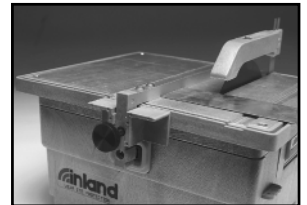

Service

For questions or comments regarding the use of this or any Inland product, visit our website at www.inlandcraft.com; email us at helpdesk@inlandcraft.com; call Inland Customer Service at 1-800-521-8428 from 9 AM to 5 PM EST or write:

Inland Craft Products, Co. • 32052 Edward Drive • Madison Heights, MI 48071

Rev No. 1

Stock No. 69861661